


Hardware, Network and Security: Integration of KOT Buzzer Device

Every time after print a KOT the Buzzer Device sounds **BEEP** that helps to aware the kitchen staffs about each KOT printings.

Step1: Connect the Buzzer Device to the LAN Port of the printer as shown in the picture below:

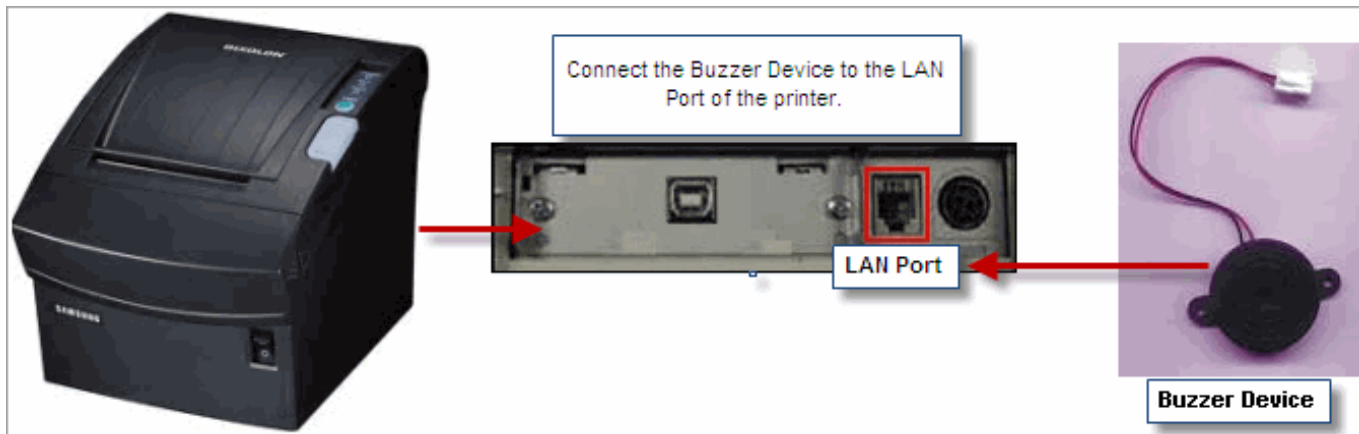

Step 2: Set the Buzzer Command:

1. From main go to the [Station Setup](#) (T > A > S)
2. Select the station name at field "Station Name" by pressing ALT+S
3. Go to the **KOT Printer** field and press CTRL+N to create the new if KOT Printer does not exist
4. **OR** Press ALT+Enter Key to modify the setup if KOT Printer exists in the list
5. Set Buzzer Command at field "KOT Buzzer Command" like **27,112,0,255,5**

```
KOT Buzzer Command      ?      27,112,0,255,5
```

6. Press ALT+S to save the changes
7. Now, after the KOT print Buzzer will sound **BEAP** every time.

List of the Buzzer Commands:

Printer	Model	Code
BIXOLON	SRP-275	27,112,48,55,121

Hardware, Network and Security: Integration of KOT Buzzer Device

BIXOLON	SRP-280	27,112,0,64,240
BIXOLON	SRP-350	27,112,0,50,250
BIXOLON	SRP-350P	27,112,48,55,121
AXIOHM	A715/A756/A794	27,112,0,48,251 OR 27,112,1,49,251
DELL	T200	7
EPSON	TM-T20	27,112,32,25
EPSON	MP1PD	27,112,0,25,250
EPSON	TM-T60	27,112,32,35
EPSON	TM-T70	27,112,48,55,121
EPSON	TM-T81	27,112,0,25,250
EPSON	TM-T85	27,112,0,25,250
EPSON	TM-T80P	27,112,0,25,250
EPSON	TM-T88	27,112,0,25,250
EPSON	TM-T88II	27,112,0,25,250
EPSON	TM-T88IIP	27,112,48,55,121
EPSON	T-88iii	27,112,0,25,250
EPSON	T88iiiP	27,112,0,64,240
EPSON	TM-88IV	27,112,48,55,121
EPSON	TM-88V	27,112,48,55,121
EPSON	TM-90	27,112,0,25,250
EPSON	M115A	27,112,0,25,250
EPSON	M129C	27,112,0,64,240
EPSON	M188A	27,112,0,25,250
EPSON	M188B/M188D	27,112,48,55,121
EPSON	M192C	27,112,0,64,240
EPSON	M192H	27,112,0,64,240
EPSON	T200	27,112,0,25,250
EPSON	TM-200	27,112,0,64,240 OR 27,112,0,25,250
EPSON	TM-U200B	27,112,0,25,250
EPSON	TM-U200D	27,112,0,64,240
EPSON	TM-U210PD/TM-210D	27,112,0,25,250
EPSON	TM-220	27,112,0,64,240 OR 27,112,0,25,250
EPSON	TM-U220	27,112,0,64,240 OR 27,112,0,25,250
EPSON	TM-U220A/TM-U220PD	27,112,0,25,250 OR 27,112
EPSON	TM-U220B/TM-U220PD	27,112,0,25,250
EPSON	TM-U220D/TM-U220PD	27,112,0,25,250
EPSON	TM-U295	27,112,48,55,121
EPSON	ADP 300	27,112,0,25,250
EPSON	TM-300D	27,112,0,25,250
EPSON	LX-300+	27,112,0,25,250 OR 27,112,48,55,121
EPSON	TM-U300PC/TM-U300PD	27,112,0,25,250
EPSON	TM-U325D	27,112,0,25,250
EPSON	TM-U375	27,112,0,25,250

Hardware, Network and Security: Integration of KOT Buzzer Device

EPSON	ECP-500	27,112,48,55,121
EPSON	M665A	27,112,48,55,121
EPSON	TM-T883P	27,112,0,50,250
EPSON	TM-U950P	27,112,0,50,250
EPSON	TM-H5000II	27,113,0,25,250 OR 27,25,247
EPSON	TM-H6000	27,112,48,55,121
EPSON	TM-J7100	27,112,48,55,121
EPSON	fp-350	27,112,0,48,251
EPSON	fp-410	27,112,1,49,251
HP	A799-C40W	27,112,0,8,8
POSIFLEX	CR-200	27,112,80,25,250 OR 27,112,0,25,250
POSIFLEX	AURA 5600/AURA 8000	27,112,80,25,250 OR 27,112,0,25,250
POSIFLEX	PP6000/PP7000/PP8000	27,112,0,25,250
SAMSUNG	STP 131	27,112,0,48,50
SAMSUNG	SRP 220	27,112,48,55,121
SAMSUNG	SRP 270	27,112,0,25,250 OR 27,112,0,60,240
SAMSUNG	SRP 270A	27,112,0,64,240
SAMSUNG	SRP-275/SRP-275AP/SRP-275C	27,112,48,55,121
SAMSUNG	SRP 350	27,110,0,25,250
SAMSUNG	SRP 350T	27,112,0,50,250
STAR	ALL?	27,7,11,55,7
STAR	TSP 100	7
STAR	TSP 100IIU	27,7,11,55,7
STAR	SP200/SP200-2/SP212	27,7,11,55,7
STAR	TSP 200	27,7,11,55,7
STAR	SP500	27,7,11,55,7 OR 27,122,49,7
STAR	SP512	27,122,49,7
STAR	SP550II	27,7,10,50,7
STAR	TSP-600	7 OR 27,7,10,50,7
STAR	TSP-650	7 OR 27,7,10,50,7 OR 27,7,11,55,7
STAR	TSP-700	27,07,11,55,07
STAR	SP2000	27,122,49,7
STAR MICRONICS	TSP 650	27,112,0,48
STAR MICRONICS	DP 8340FM	27,7,11,55,7
TEC	RKP300	27,112,0,100,250
TEC	TRST-A10	27,112,48,55,121
TEC	TRST-53	27,112,0,100,250
CITIZEN		2PIN = 27,112,0,50,250 5PIN = 27,112,1,50,250

Unique solution ID: #1788

Author: Uttam Bari

Hardware, Network and Security: Integration of KOT Buzzer Device

Last update: 2014-04-21 06:44